


SAFEX ESE WOOD

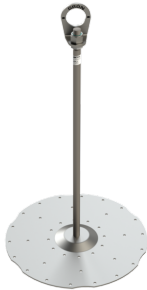

For screwing onto OSB boards – rough formwork panels – multilayer boards (plywood).

- OSB boards min. 16 mm
- Rough formwork panels min. 22 mm
- Multilayer boards (plywood) min. 15 mm
- Tested and certified as per EN 795:2012-A + CEN/TS 16415:2017-A

Height of roof system: Max. 550 mm

Support height: 300-700 mm

Mounting material: 38 pc. drilling screws JT3-ST-2-6.0×35